



CUSTOM WINDOW SHADES


MANUAL INSTALLATION INSTRUCTIONS

TOOLS:
• screwdriver (phillips)


MOUNT THE BRACKETS

If the clutch is on the right end of the shade, attach the brackets to the window frame, window molding, wall or ceiling, as shown below. If the clutch is on the left end of the shade, reverse the bracket positions, left for right.


TO THE INSIDE OF THE WINDOW FRAME

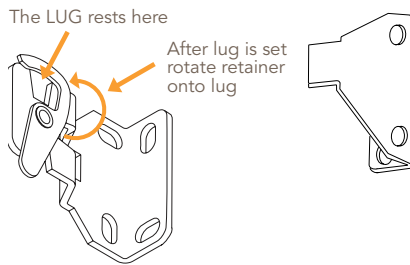

TO THE WALL OR TO THE FRONT OF THE WINDOW MOLDING

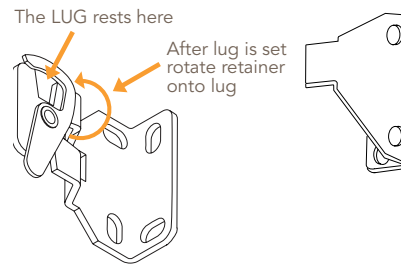


TO THE CEILING OR TO THE TOP OF THE WINDOW FRAME

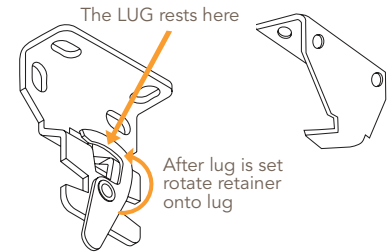

INSTALL THE SHADE

- Push the clutch straight onto the blade of its bracket. The bottom of the clutch should always point straight down.
- Lower the lug of the end plug onto the "V" of its bracket. The roller should fit in the brackets securely, with just a little play. Rotate the riveted retainer portion to lock the lug in position.

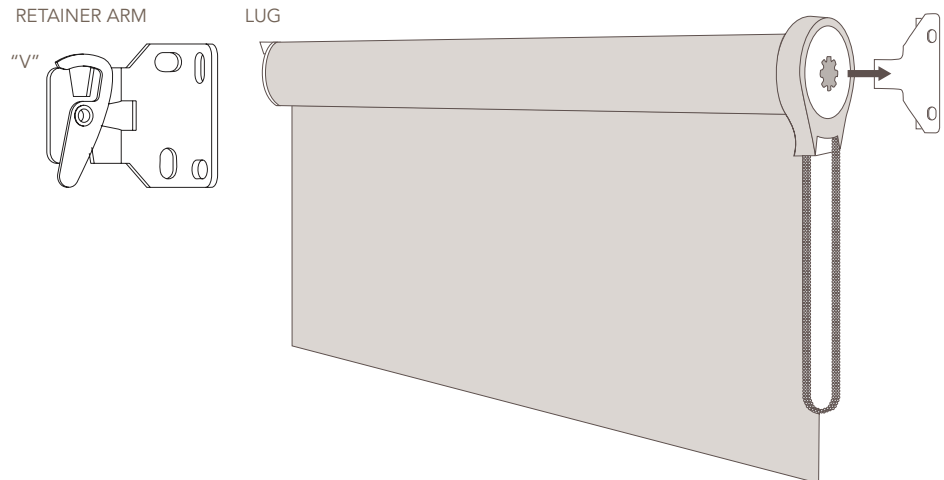



USE THE CONTROL CORD TO OPERATE THE SHADE

Pulling gently on the cord in one direction raises the shade; pulling it in the other direction lowers it.

ATTACH STOPS TO BEAD CHAIN

On metal bead chain, attach a metal stop ball that is at least 5/16" (8mm) in diameter, so that it touches the mouth of the clutch when the shade is in the all-rolled-up position. For metal or plastic bead chain, lower the shade to sill or floor height, and attach the appropriate metal stop or plastic connector next to the clutch, this prevents the shade from being lowered beyond that point.

IF USING PLASTIC OR METAL BEAD CHAIN, POSITION THE PLASTIC CONNECTOR OR STOP BALL AS THE UPPER SHADE STOP

Decide which end of the tube you want to put the clutch in. Keep track of which is the "clutch end" of the tube. Roll the shade all the way up and lay it on the work table so it looks like this  and not like this 

Insert the clutch into its end of the tube, and pull on the upper chain until the connector touches the clutch firmly. Do not attach the lower plastic stop, or any stops on metal chain bead, until installing the chain.




CLUTCH ROLLER INSTALLATION INSTRUCTIONS

TOOLS:
• screwdriver (phillips)

The brackets for clutch roller shades are universal – you can use the same bracket for right, left, ceiling, wall or inside mount installations.


REEL ON THE RIGHT

If your shade was made with the reel and chain on the right, the simple slot bracket goes on the right and the hinged bracket goes on the left. Like this:

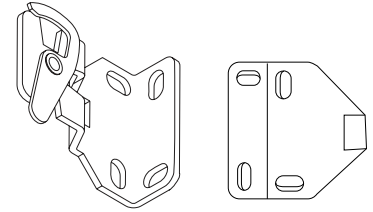


REEL ON THE LEFT

If your shade was made with the reel and chain on the left, the simple slot bracket goes on the left and the hinged bracket goes on the right. Like this:

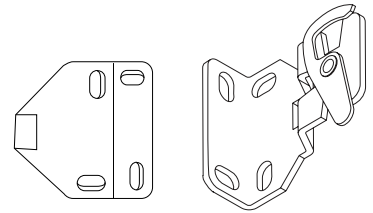


WALL MOUNT

If your shade is going to be mounted into the wall or on the trim around a window, use the screw holes in the foot of the bracket. Like this:

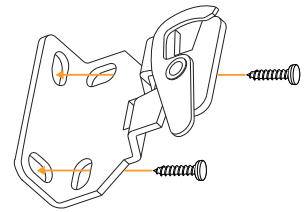


INSIDE MOUNT

If your shade is going to be mounted inside the window frame, use the screw holes in the side of the brackets. Like this:

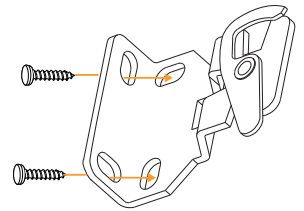

CEILING INSTALLATION

If your shade is going to be mounted upwards into the ceiling, position the brackets with the foot upwards and use the screw holes in the foot of the bracket. Like this:

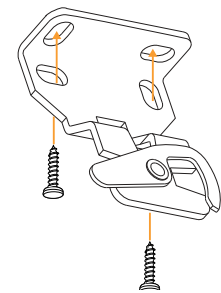

INSTALLATION NOTES

- Make sure that the brackets are perfectly level with each other
- After placing the shade into the brackets, turn the lever on the hinged bracket to secure the shade in place
- After the shade is completely installed, carefully remove the paper wrap