



VALANCE (CURVED) INSTALLATION INSTRUCTIONS


TOOLS:
• screwdriver (phillips)

The brackets for clutch roller shades are universal – you can use the same bracket for right, left, ceiling, wall or inside mount installations.

STEP ONE

Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (50mm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.


Identify Spacing for Brackets

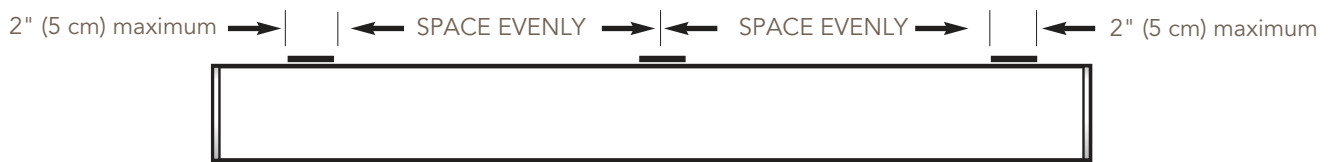

Choose Mounting Type


For **inside or ceiling mounts**, use the top bracket holes.

Make sure the release tab is always mounted on the bottom.

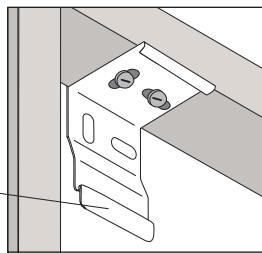


For **wall or outside mounts**, use the rear bracket holes.

Make sure the release tab is always mounted on the bottom.

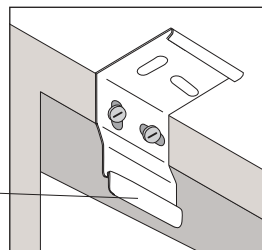

Mount Headrail

Mount the headrail. Position the headrail with the front panel **(A)** resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the head-rail engages the bracket and snaps into place, **(B)** as shown.

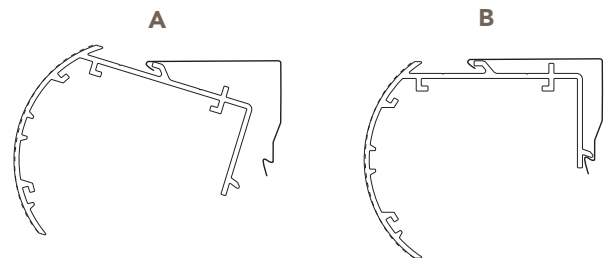

STEP TWO

Operate the shade by pulling down on one side of the cord - one side of the cord raises the shade, the other side lowers the shade. Do not lift the bottom rail with your hands. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly.

REMOVAL

To remove a shade - from the bottom rear of the headrail insert a flathead screwdriver in between the headrail and release tab. Gently twist the screwdriver and pry open the bracket to release the headrail. Support headrail to keep it from falling.