



CUSTOM WINDOW SHADES

GUIDE TO MEASURING

MOUNTING INSIDE / OUTSIDE

DECIDE WHICH TYPE OF MOUNT:

INSIDE

- Mounted inside the window frame
- Creates clean, seamless, built-in design
- Minimal impact to woodwork and other details
- Perfect for utilizing window to backlight your custom designed images.

OUTSIDE


- Perfect alternative if there is not enough depth for inside mount
- Mounted to wall, ceiling, or molding surrounding window
- Often used to make the window appear larger or to hide a less attractive window or door

MEASURING INSIDE / OUTSIDE

INSIDE

STEP 1: Measure the inside width at the top of the window. This is your ordering width. You will enter this dimension into the web application.

STEP 2: Measure the height at 3 locations - the left side, middle, and right side. Record the largest of the 3 measurements. This is your ordering length.

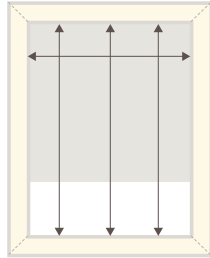


Note: Shade fabrics will be approximately 1 3/8" narrower than your ordering width to allow for brackets. If concerned over resulting light gap please select outside mount.

OUTSIDE

STEP 1: Measure the width of the area you wish to cover. If space allows we recommend adding 3-4" (1 1/2-2" each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement outside bracket to outside measurement.


STEP 2: Measure the height of the area you wish to cover. This is your ordering length.

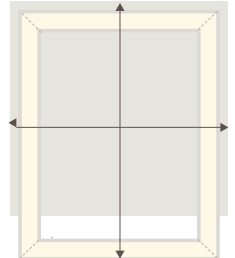

Note: Your shade material will be made 1 1/4" narrower than the measurement you provide to allow for brackets. If you need your shade to cover a specific width (ie. mounting on a door) add 1 1/4" to width and this is your ordering width.

INSIDE MEASUREMENT NOTES:

USE IMAGE BELOW TO NOTE YOUR MEASUREMENTS

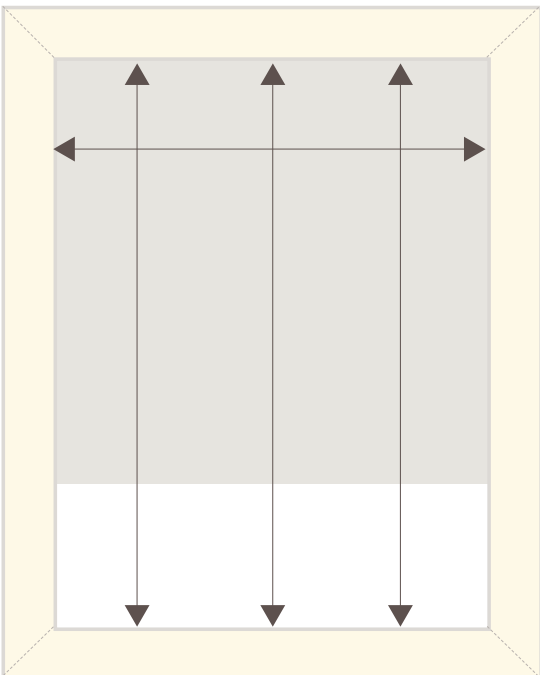

OUTSIDE MEASUREMENT NOTES:

USE IMAGE BELOW TO NOTE YOUR MEASUREMENTS

